



MLT3060 • MLT3080 Supplement



This supplement is meant to be used in conjunction with the Magnum Operating & Parts Manual(s) provided with the unit. Please refer to the Magnum Operating & Parts Manuals for complete operation and safety instructions!

Introduction

This supplement is to be used in addition to the Magnum manual (Part Number 11132, Rev. U) received with this unit. Make sure to read and fully understand all safety and operating instructions in the Magnum Operating manual before attempting to operate the equipment.

Table of Contents:

	Page:
Introduction	1
Table of Contents	1
Parts	1 - 2
Wiring Diagram(s)	3

Parts

The following table lists changes to the MLT3060/MLT3080 since publication of your manual. The table includes added and deleted parts, as well as when they were changed and the page in the manual that the original (deleted) part can be found. Any part being deleted without adding a part means the part is no longer used on the unit. Any part being added without deleting a part means the part has not previously been used on the unit.

Date	Page No.	Item No.	Part No.	Description	Added	Deleted	Notes
02.11.09	27	3	11553	Decal, instruction - 3000 4 lang (MW)		1	
	27	3	10588	Decal, instruction - 3000 oval 4 lang (MW)	1		Start Serial Number 0900187
02.11.09	27	4	12881	Decal, instruction 3000 4-lang (EW)		1	
	27	4	10589	Decal, instruction - 3000 oval 4 lang (EW)	1		Start Serial Number 0900187
02.11.09	37	1	16540	Radiator w/fan guard - Mitsubishi	1	1	
	37	1	13924	Radiator w/fan guard - Mitsubishi - welded	1		Start Serial Number 0900192

Date	Page No.	Item No.	Part No.	Description	Added	Deleted	Notes
02.11.09	59						Kubota DC wiring diagram updated. See page 3 of this supplement for current wiring diagram. Start Serial Number 0900091.
05.27.09	55	4	15212	Generator, 8kW		1	End SN: 0900431
	55	4	10486	Generator, 8kW	1		Start SN: 0900432

